


EMS-APT INSTALLATION DIAGRAM

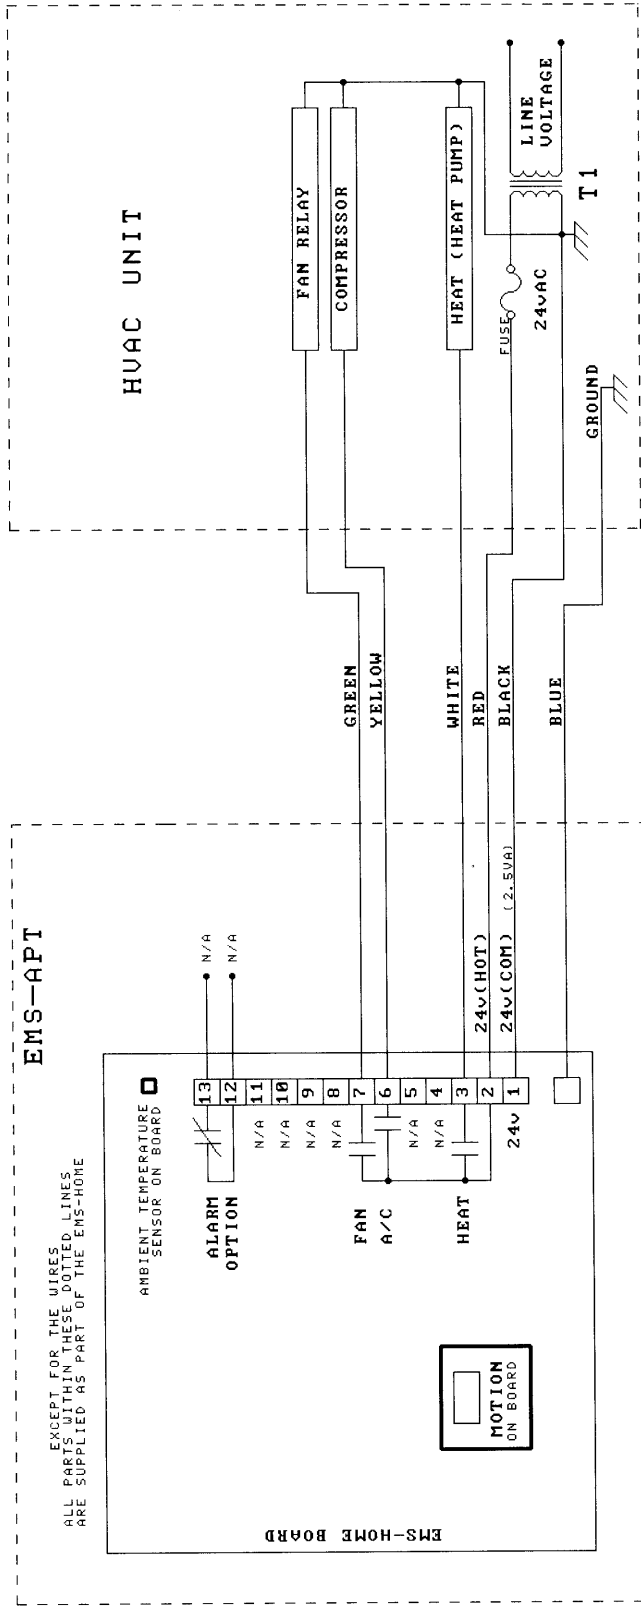

NOTES:

- 1) WIRING MUST NOT RUN PARALLEL TO 120 OR 240V WIRES, OTHERWISE USE SHIELDED CABLE. RESPECT BUILDING AND FIRE REGULATION CODES.
- 2) RESPECT ALL THE RULES WHICH APPLY TO STANDARD THERMOSTATS WHEN CHOOSING THE BEST LOCATION FOR THE EMS: AVOID DRAFTS, DIRECT SUN LIGHT FROM WINDOWS, ENSURE PROPER AIR CIRCULATION ...

This document is the property of LOG-ONE Ltd. and contains confidential proprietary information. It is loaned to third parties and is not to be used without prior written approval from LOG-ONE Ltd.

LOG-ONE Ltd.
Tel. 905-729-4380 Fax. 729-2910

Title		Revision	
EMS-APT WIRING DIAGRAM		A	
Size	Number	EMS-APT2	Revision
B	B		
Date:	15-MAY-1998	Sheet	1 of 1
File:	D:\EMS-DUGS\EMS-AP	Drawn	But HUGUES